
I
Ē
ΙT
ΙΤ,
6
工
Ó

REV	EC# or BY	DESCRIPTION	DATE
Α	DPP	DELETED THE SET COLLAR	9/25/01

AUGER INSTALLATION TOOL SET-UP DIRECTIONS

- I. Rotate the augershaft manually until one of the keyways is located at the top of the augershaft.
- 2. Install the Extension Support (Item #3) onto the left handed stud at the front of the augershaft. TIGHTEN SECURELY! Note: The LH stud needs to be in good condition for the tool to be anchored properly. If in doubt replace the LH stud at this time.
- 3. Install the Back-up Spiral Support (Item #2) onto the Extension Support (Item #3). Rotate the Back-up Spiral Support so the two holes in the side are located at the top.
- 4. Lay the Fast Feed Spiral Slide (Item#I) onto the Back-up Spiral Support (Item#2) so the Slide lays in the keyway and butts against the driving face of the augershaft.
- 5. Tighten the set screws on the Back-up Spiral Support (item#2) to prevent the Fast Feed Spiral Slide (item#1) from rotating out of position. You are now ready to install the augers.

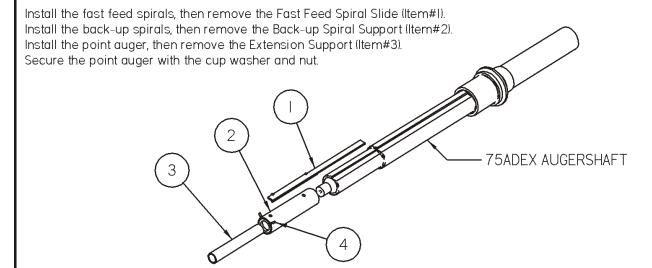

Item No.	Document No.	Title	Qty
	DRD-S-1604-SR	FAST-FEED SPIRAL SLIDE	I
2	DRD-S-1603-SR	BACK-UP SPIRAL SUPPORT	I
3	DSD-S-1602-SR	EXTENSION SUPPORT	I
4	PSB-S-2122-SP	I/2" x I" SOC HD SET SCREW (DOG POINT)	2

AND SUBJECT TO RI	NFORMATION HEREIN ARE THE SOLE PROPERT ECALL BY J.C.S.& S. IT MAY NOT BE USED OR THOUT THE WRITTEN CONSENT OF J.C.S.& S.	
MACHINE: 75ADEX		STATESVILLE, N.C. 28677 U.S.A. (704) 872-3681 - FAX (704) 878-0789 - http://www.jcsteele.com
ASSY. DWG:		75ADEX AUGER
MATERIAL: TREATMENT:		INSTALLATION TOOL
DPP DRAWN BY:	DATE: 6/27/01	CUSTOMER
CHECKED BY:	DATE:	
PATTERN NO:		SIZE A SCALE NTS RELEASED SHEET OF 1
PART CODE:		DRD-D-1600-CB REV. A