
-
3
T
Т.
6
I
9
55

REV	EC# or BY	DESCRIPTION	DATE
Α	DPP	DELETED THE SET COLLAR	9/24/01

AUGER INSTALLATION TOOL SET-UP DIRECTIONS

- I. Rotate the augershaft manually until one of the keyways is located at the top of the augershaft.
- 2. Install the Extension Support (Item #1) onto the left handed stud at the front of the augershaft. <u>TIGHTEN SECURELY!</u> Note: The LH stud needs to be in good condition for the tool to be anchored properly. If in doubt replace the LH stud at this time.
- 3. Install the Back-up Spiral Support (Item #2) onto the Extension Support (Item #1). Rotate the Back-up Spiral Support so the two holes in the side are located at the top.
- 4. Lay the Fast Feed Spiral Slide (Item#3) onto the Back-up Spiral Support (Item#2) so the Slide lays in the keyway and butts against the driving face of the augershaft.
- 5. Tighten the set screws on the Back-up Spiral Support litem#2l to prevent the Fast Feed Spiral Slide (item#3l from rotating out of position. You are now ready to install the augers.

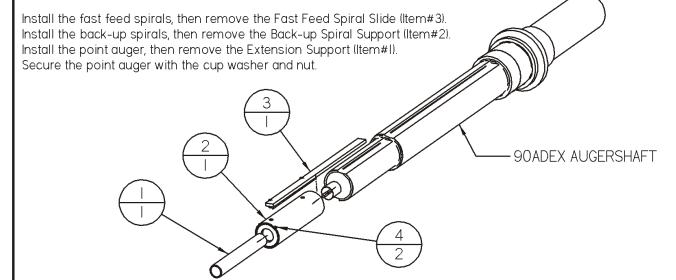

Item No.	Document No.	Title	Qty
1	DSD-S-1602-SR	EXTENSION SUPPORT	I
2	DSD-S-1603-SR	BACK-UP SPIRAL SUPPORT	I
3	DSD-S-1604-SR	FAST-FEED SPIRAL SLIDE	I
4	PSB-S-2122-SP	I/2" x I" SOC HD SET SCREW (DOG POINT)	2

THIS DRAWING AND THE INFORMATION HEREIN ARE THE SOLE PROPERTY OF J.C. STEELE & SONS AND SUBJECT TO RECALL BY J.C.S.& S. IT MAY NOT BE USED C REPRODUCED WITHOUT THE WRITTEN CONSENT OF J.C.S.& S. IT MAY NOT BE USED OR 710 SOUTH MULBERRY STREET MACHINE: STATESVILLE, N.C. 28677 U.S.A. 90ADEX (704) 872-3681 - FAX (704) 878-0789 - http://www.jcsteele.com ASSY. DWG: 90ADEX AUGER MATERIAL **INSTALLATION TOOL** TREATMENT: DRAWN BY: DPP 06-14-01 CUSTOMER CHECKED BY: DATE: PATTERN NO: SIZE SCALE RELEASED PART NO: DRAWING SD-D-1600-CB NUMBER: PART CODE: DSD-D-1600-CB